



PCB				
CN1	Ext. JTAG		JATG	JP1
CN2	JTAG	ST-LINK IIJTAG		
CN3	USB	USB	JP12	STM32F103 USB
CN4	ST-LINK	USB		JP18
CN5	UART-0	RS-232	0	JP15
				UART0
CN6	UART-1	RS-232	1	JP15
				UART1
CN7	CAN	CAN	JP6	CAN
CN8	SD CARD	SD	JP8	SD

PCB	CPU			
JP1	JTAG			STM32F103VBT6 JTAG
JP2	LED	LD2	PC7	LED2
		LD3	PC6	LED3

		LD4	PC5	LED4
		LD5	PC4	LED5
JP3	User-Key	KEY2	PD3	KEY2
		KEY3	PD4	KEY3
JP4	User-Key	JOY_UP	PD14	
		JOY_DOWN	PD15	
		JOY_LEFT	PD13	
		JOY_RIGHT	PD12	
		JOY_SEL	PD11	
JP5	ADC	ANALOG	PC0	ADC
JP6	CAN	CAN_TX	PD4	CAN
		CAN_RX	PD5	CAN
JP7	LCD2	PE8:15	PE8:15	LCD
JP8	SPI	SD_CS	PD9	SD Card
		SD_PWR	PD10	SD Card
		SPI1_SCK	PA5	SD Card
		SPI1_MISO	PA6	SD Card
		SPI1_MOSI	PA7	SD Card
JP9	Power			STM32F103VBT6
JP10	I2C	SDA	PB7	I2C SDA
		SCL	PB6	I2C SCL
JP11	LCD1	PE0:7	PE0:7	LDC
JP12	USB	USB_DM	PA11	
		USB_DP	PA12	
JP13	VBAT	VBAT	VBAT	STM32F103VBT6
JP14	USB_EN	USB_EN	PD8	USB
JP15	UART	U0_TX	PA9	UART0
		U0_RX	PA10	UART0
		U1_TX	PD1	UART1
		U1_RX	PD0	UART1
JP16	BOOT0	Boot0	Boot0	BOOT0
JP17	BOOT1	Boot1	PB2	BOOT1
JP18	STLINKII/USB	STLINKII/USB		STLINKII/USB
JP19	CAN Load			CAN

STM3210B-LK1

CDROM

installSTLink.exe

<http://ww.manley.com.cn>

025-83235502,83235503

17 02 (210003)

025-83235501

C:\Manley\drivers\STLink

STM3210B-LK1

CDROM

EKSTM32F_examples.exe

C:\Manley\EKBoard\EKSTM32F

- BBS: <http://www.manleybbs.com>
- 025-83235502~83235505(9 00 5 00)
-
-

STM3210B-LK1	399.00



